

## MS5145 – Configuration avec touche ENTER

KB 20140225

### Recall Defaults



### Enter/Exit Configuration Mode



### French Keyboard



### Enter/Exit Configuration Mode

